



Lower Post Included
Use When No Wall
Present

**Specifications
Titan Incline Platform Lift**

- Model:** IPL500
- Rated Load:** 500 lbs
- Drive:** Rack and Worm Gear / 24 VDC 1/8 HP Motor w/Brake
- Power Supply:** 120VAC, 15Amp Grounded
- Control Circuit:** 24 VDC
- Platform:** 27.5" X 36" 90°
Manual Fold
- Power Folding Ramps for Entry/Exit
- Travel:** 40' Maximum
- Speed:** 14 FMP
- Controls:** Constant Pressure Rocker Switch on Platform
Infrared Wireless Call-Send Controls
- Manual Lowering:** Device Provided
- Safety Design Standards:** Incline Platform Lifts Meets: ASME A18.1-2014, Section 6
CAN/CSA B44.1-2014/ASME A17.5-2014
Residential Use Only
ETL Listed - Control No. 3148125 (Indoor Only)
- Safety Features:**
Overspeed Governor
Upper & Lower Landing Limits
Upper & Lower Final Limits
Ramp obstruction Sensors
Under Platform Safety pan Obstruction Sensors
Drive Chassis Obstruction Sensors
Non-Skid Platform Surface
Emergency Stop Button

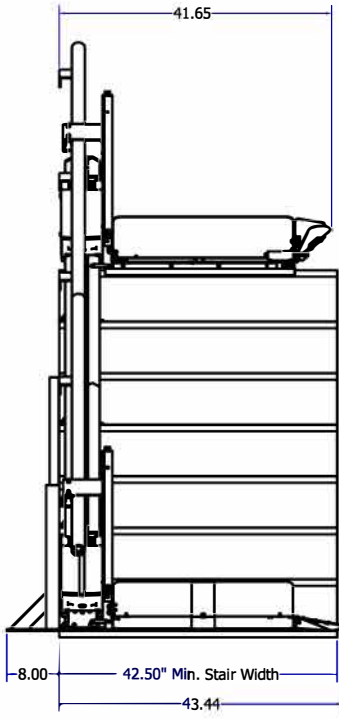

Note:
Add 1 1/2" to Minimum Width
for Free-Standing Applications.

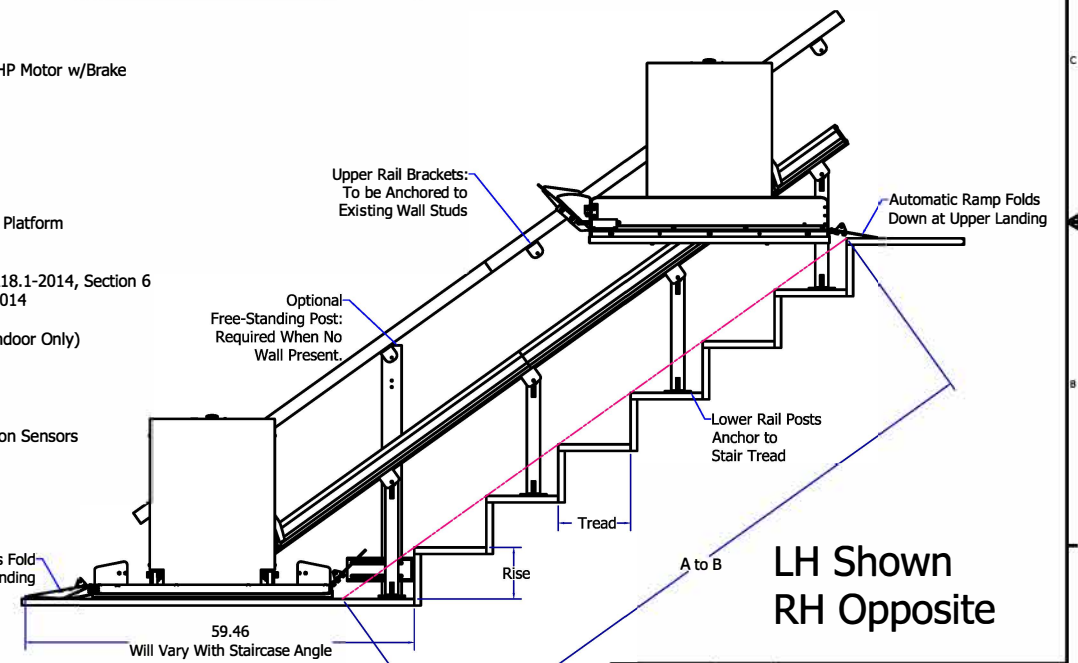

LH Shown
RH Opposite

DRAWN		TIT		CHECKED			
<small>This document is the property of Heimer and is delivered upon the express condition that the contents will not be disclosed or used without the written consent of Heimer.</small>						TITLE IL500 Titan Incline Platform Lift	
THIRD ANGLE PROJECTION		<small>Tolerance UNO X .1 X .01 X .005 X .0025 Ang .5°</small>		SIZE	FINISH	DWG NO	REV
				D		IL500 90D TYP	
				SCALE	SHEET 1 OF 1		