
## SUMMIT SL350AC COMFORT AND CONVENIENCE



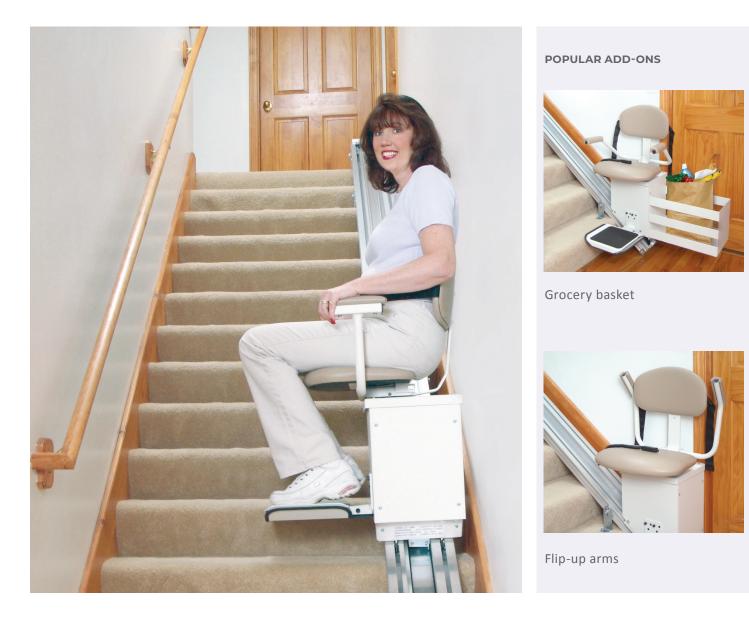

The SL350AC stair lift is engineered to operate directly on AC power. This direct power option means there's no need for batteries in the unit, helping to keep long term maintenance to a minimum. The backrest has three different settings, and the fold-up footrest adjusts to two different heights for the utmost in custom comfort. The spacious, wide seat features thick padding and attractive upholstery.

## FEATURES AND BENEFITS

- Runs on AC power, for long-term indoor use
- Constant-pressure rocker controls
- Seat and footrest fold to save space when not in use
- Cable drive system with overspeed safety
- Durable powder coat finish



## SL350AC PRODUCT SPECIFICATIONS

WEIGHT CAPACITY	<ul> <li>350 lb up to 15' 9" track</li> <li>250 lb for 15'10" - 25' track</li> </ul>	TRACK LENGTH	<ul> <li>15' 9" standard</li> <li>Maximum 25' (reduced capacity)</li> </ul>
INCLINE LIMITS	30° to 45°	SPEED	20 FPM
SEAT SIZE	17.5" x 14"	FOOTREST SIZE	9.5" x 10"
FOLDED WIDTH	14" from wall	DRIVE	Cable
ETL CERTIFIED	<ul> <li>ETL listed</li> <li>CSA B44.1/ASME A17.5</li> <li>Safety standard ASME A18.1</li> </ul>	WARRANTY	3-year parts
SAFETY FEATURE(S)	<ul> <li>Footrest obstruction switch</li> <li>Swivel seat cut-off switch</li> <li>Final limits</li> <li>Slack cable brake with switch</li> <li>Constant pressure controls</li> <li>Seat belt</li> </ul>	OPTION(S)	<ul> <li>Key lock</li> <li>Extra rail</li> <li>Flip up armrests</li> <li>Grocery basket</li> </ul>



25SEP2020 | MKT-000066 REV B

